

ANZTEC

www.anztec.com

QC-3502 Instruction Manual



Revision 1.0

Contents

0	Machine Operation.....	3
0.1	Attendant Menu	3
1	Event Log	4
2	Accountancy Meters.....	5
2.1	Short Term Meters	5
2.2	Long Term Meters	5
2.3	Clear Short Term Meters.....	5
3	Refills.....	6
4	Hopper Coin Count	7
5	System Information	7
6	Setup.....	8
6.1	Set Machine Currency.....	8
6.2	Set Time and Date.....	9
6.3	Set Address	9
7	System Debug	10
8	Factory Settings.....	10
9	System Reset	10

0 Machine Operation


This manual contains instructions for performing basic tasks with the QC-3502 Change Machine.

0.1 Attendant Menu

Switch on the QC-3502, and allow it to start up.



 Open the top door, and you will see the following on the screen:

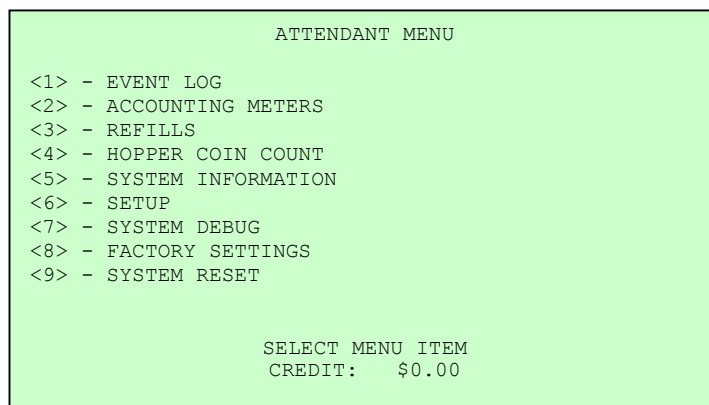

You can choose which function you require by pressing its number on the keypad.

1 Event Log

Press 1 from the Attendant Menu to enter the Event Log.
You will see the following screen.

```
EVENT LOG

0000000016.13/03/2008 13:37:05
EVENT: HOPPER REFILLED

0000000015.13/03/2008 13:36:10
EVENT: DOOR OPENED

0000000014.13/03/2008 13:35:25
EVENT: DOOR CLOSED

NAVIGATE USING UP DOWN LEFT RIGHT KEYS
PRESS * TO EXIT # FOR TOP EVENT DETAILS
```

You can scroll through the events by using the up and down keys. To see more information about an event, scroll until the event you wish to see is at the top. Press # to see information for the top event.

Press * to exit.

2 Accountancy Meters

The QC-3502 has two sets of meters – short-term and long-term. The long-term meters cannot be reset, but the short-term meters can be reset at any time suitable to the user.

From the Attendant Menu, press 2.
You will see the following screen:

```
ACCOUNTANCY METER MENU

<1> - SHORT TERM METERS
<2> - LONG TERM METERS
<3> - CLEAR SHORT TERM METERS

SELECT MENU ITEM
OR * TO EXIT
```

2.1 Short Term Meters

To view the Short Term Meters, press 1 from the Accountancy Meter menu.
You will see the following screen.

```
SHORT TERM METERS

M01> BILL ACCEPTOR $5.00 ACCEPT
0 NOTES          $0.00

M02> BILL ACCEPTOR $10.00 ACCEPT
0 NOTES          $0.00

M03> BILL ACCEPTOR $20.00 ACCEPT
0 NOTES          $0.00

M04> BILL ACCEPTOR $50.00 ACCEPT
0 NOTES          $0.00

NAVIGATE USING UP DOWN LEFT RIGHT KEYS
OR PRESS * TO EXIT
```

2.2 Long Term Meters

 
To view the Long Term Meters, press 2 from the Accountancy Meter menu. The Long Term Meters screen displays information in the same format as the Short Term Meters screen.

2.3 Clear Short Term Meters


Press 3 from the Accounting Meters menu.

3 Refills


From the Attendant Menu, press 3.
You will see the following screen:

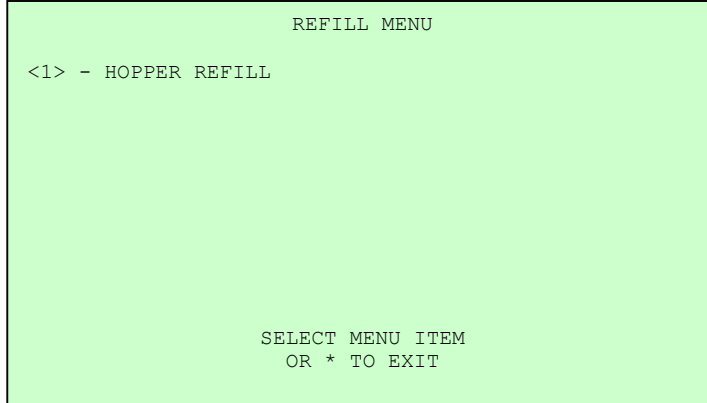

Press 1 to enter Hopper Refill Mode.

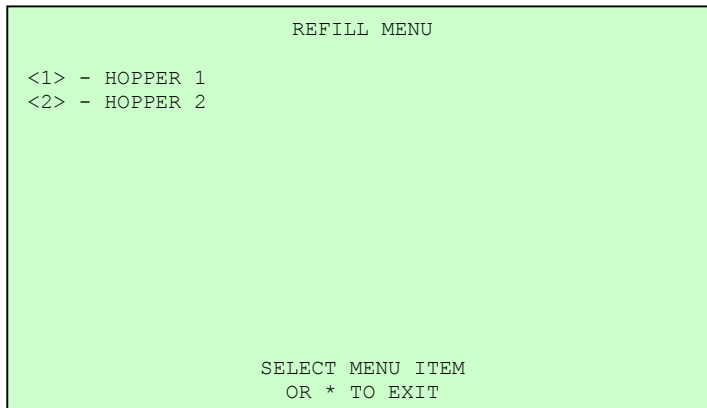 

 Press 1 to select Hopper 1, or 2 to select Hopper 2.

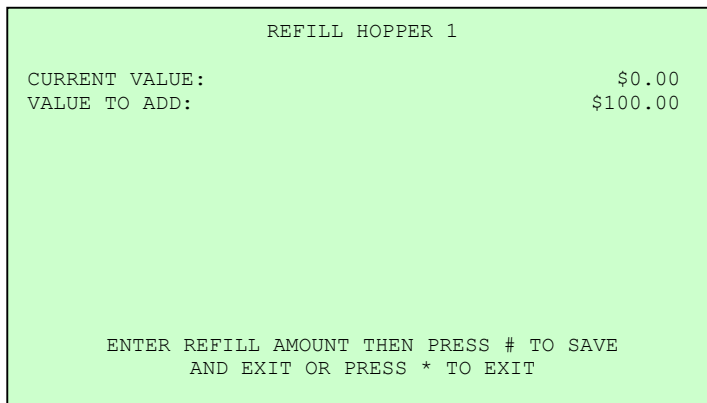


Enter the amount to add to the hopper, and press # to save. In this example, the user is adding \$100.

Note: It is essential that the correct value be entered for the refill. Otherwise, all accounting will be incorrect!

4 Hopper Coin Count

 From the Attendant Menu, press 4.
You will see the following screen:

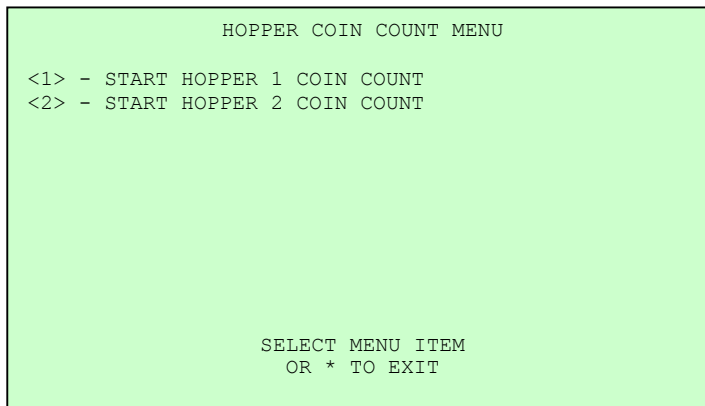


Press 1 or 2 to start the hopper coin count. The hopper will dispense coins, counting each coin as it is dispensed. The total count is displayed for your records.

5 System Information

This is used during manufacture. It is not necessary to use this setting.


6 Setup

 From the Attendant Menu, press 6.
You will see the following screen:

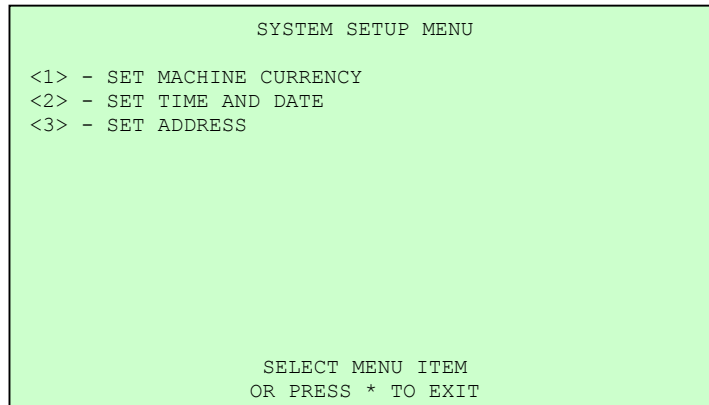

6.1 Set Machine Currency

 From the System Setup Menu, press 1.
You will see the following screen:

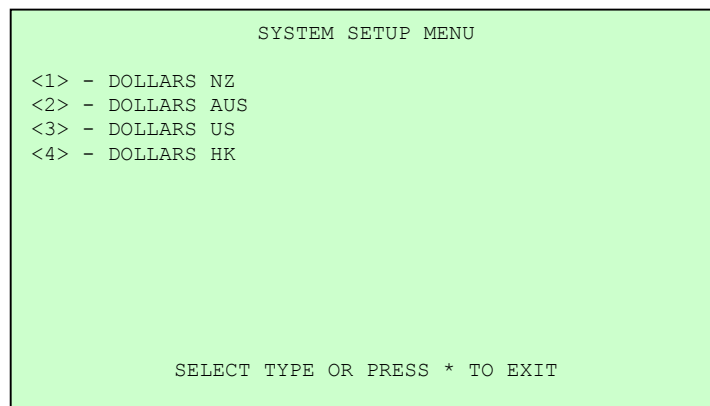

Select the number of the currency you would like to use, or press * to exit.

6.2 Set Time and Date

From the System Setup Menu, press 2.
You will see the following screen:

```
                SET TIME AND DATE
CURRENT DATE / TIME      13/03/08  13:23:35
NEW DATE / TIME         --/--/--  --:--:--

                ENTER DATE AND TIME THEN PRESS #
                TO SAVE AND EXIT OR PRESS * TO EXIT
```

Type the date and time, then press # to save and exit.

6.3 Set Address

This option is not used for stand-alone machines.

7 System Debug

 
This is used during manufacture. It is not necessary to use this setting.

8 Factory Settings

This is used during manufacture. It is not necessary to use this setting.

9 System Reset

From the Attendant Menu, press 9.
You will see the following screen:

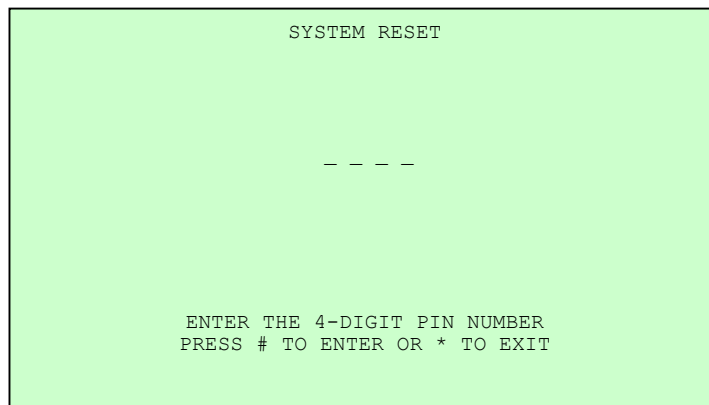

Enter the PIN Number (1967) and press # to reset the system.

End of Document