

QC-5003

Through-the-Wall Coin Change Machine



Instruction Manual



Anztec, P.O. Box 3288, Christchurch, New Zealand Phone +64 3 338 3139 www.anztec.com email: sales@anztec.com

Serial #

Key #

Software Ver.

Contents

Installation	
Overview	
Start Up	4
Reset Meters and Events to zero	5
Fill Hoppers	5
Daily Management	6
Overview	
Enter Attendant Mode	
Access Event Log	7
Event List	
Access Accountancy Menu	9
Accountancy Meter List	
Clear Short Term Meters	
Mounting Guide	
Recommended Wall Cutout	

Warning

Never remove, unplug, or replace any components inside this machine without first turning off the mains power. Failure to comply may result in damage to your machine and void your warranty.

Installation

Overview

To prepare your **Quick Change** for use, you need to:

- Connect the machine to a power source
- Reset the system
- Load the coins

The following installation instructions show you how to do this.

Start Up

To start the machine:

- 1. Unpack and install the equipment supplied.
- 2. Open the Main Door of the machine.
- 3. Plug the **QC-5003** power cord into the internal three pin socket. Plug the other end into a mains supply outlet.
- 4. Switch the unit on using the Mains Switch on the Power Supply Front Panel.

Reset Meters and Events to zero

To reset the meters and events to zero:

1. Start with the machine powered down. Press and hold down buttons 1 and 3 while the machine powers up. Release both buttons.

SYST	TEM RESET?	
PUSH B	2 TO PROCEED	

2. Press button 2.



The machine has now been reset to zero and is ready to accept currency.

Fill Hoppers

This unit is designed to pay out automatically. When the correct funds have been inserted, the **Quick Change** will dispense the appropriate number of coins. Partial credits will be held until further funds are inserted to enable payout.

If the machine becomes empty in the course of operation, simply add coins and turn the machine off and on again. The machine will resume payout where it left off when the hopper was emptied.

To add coins to the hopper:

- 1. Check that there are no rubber bands, coin bags, or other foreign bodies in with the coins.
- 2. Check that you are placing the correct denomination of coins into the correct hopper.
- 3. Pour the coins into the hopper.

Daily Management

Overview

Once you have installed the **Quick Change**, you can enter Attendant Mode to perform the following functions when required:

- Access Event Log
- Access Accountancy Menu
- Clear Short Term Meters

The following daily management instructions show you how to do this.

Enter Attendant Mode

1. Press button 3 to enter Attendant Menu. There are four screens in this menu.

Δ	ATTENDANT MENU
/	EVENT LOG

2. Press button 1 to move through the menu.



To exit Attendant Menu, use buttons 1 or 2 to move to screen D. Press button 3 to return to normal operation.

If no buttons are pressed for 30 seconds the machine will return to normal operation automatically.

Access Event Log

The **Quick Change** event log records the last 10 events. It records:

- Notes accepted (by denomination)
- Coins accepted (by denomination)
- Notes dispensed
- Coins dispensed (by number)

To access the event log:

1. Press button 3 to enter Attendant Menu.



2. Press button 3.

LAST	EVENT	SHOWN
	FIRST	-

3. Press buttons 1 or 2 to move through the event log.

To exit this menu press button 3. Move through the menus by pressing buttons 1 or 2 until you reach the exit menu. Press button 3 to return to normal operation.

If no buttons are pressed for 30 seconds the machine will return to normal operation automatically.

Event List

The following is a list of the events recorded by the event log.

Hoppers	Hopper 1 empty Hopper 2 empty
Coins In	Coin in channel 1 Coin in channel 2 Coin in channel 3 Coin in channel 4 Coin in channel 5 Coin in channel 6
Notes In	Note in channel 1 Note in channel 2 Note in channel 3 Validator cheated Note jammed Validator faulty
Coins Out	Coins out hopper 1 Coins out hopper 2
System	Machine powered up System clear Short term meter clear

Access Accountancy Menu

The **Quick Change** has 16 electronic meters which you can access while in Accountancy Mode. This mode overrides all functions other than Service Mode.

In Accountancy Mode, you can zero all the short term accountancy meters. To reset the long term meters, refer to **Reset Meters and Events to Zero** on page 5.

1. Press button 3 to enter Attendant Menu.

ATTENDANT MENU	
EVENT LOG	

2. Press button 1 to move Accountancy Menu.



3. Press button 3 to enter Accountancy Mode.

SELECT	ACCOUNT MODE	
SH	IORT TERM	

4. Press button 3 to enter Short Term Meter Mode, or button 1 to enter Long Term Meter Mode.

10C	COINS	IN
0	COINS	

5. Press buttons 1 or 2 to view meters.

To exit this menu and return Attendant Menu, press button 3. Move through the menus by pressing buttons 1 or 2 until you reach the exit menu. Press button 3 to return to normal operation.

If no buttons are pressed for 30 seconds the machine will return to normal operation automatically.

Accountancy Meter List

	Mete	er No
Number and value of coins in	1	10c
	2	20c
	3	50c
	4	\$1.00
	5	\$2.00
Value of total coins in:	6	Total coins
Number and value of notes in:	7 8 9 10 11	\$5.00 \$10.00 \$20.00 \$50.00 \$100.00 (Not Used)
Value of total notes in:	12	Total notes
Total value in:	13	Grand total in
Payout:	14 15	Hopper 1 paid out Hopper 2 paid out
Total value out:	16	Grand total out

Clear Short Term Meters

1 Press button 3 to enter Attendant Menu



2 Press button 1 to move through the menu to:

ATTENDANT MENU
CLEAR S/TERM METERS

3 Press button 3 to enter Meter Clearance screen.



4 Press button 3 to clear short term meters. To exit this menu press button 1 or 2.

SHORT TERM	
METERS CLEARED	

Move through the menus by pressing buttons 1 or 2 until you reach the exit menu. Press button 3 to return to normal operation. If no buttons are pressed for 30 seconds the machine will return to normal operation automatically.

Mounting Guide

To install the unit:

- Remove the angle clamping brackets from the cabinet.
- Push unit through the aperture from the outside until the front panel is hard against the wall.
- Re-bolt the clamping brackets loosely to the cabinet.
- Push the clamping brackets up against the wall and tighten the bolts on the cabinet to lock it into place.
- The forward facing bolts on the clamping brackets can be adjusted for extra tension.
- Plug power cord into power supply, switch on and the unit is installed.



Recommended Wall Cutout

