QC-7600A



Instruction Manual



Anztec, P.O. Box 3288, Christchurch, New Zealand Phone +64 3 338 3139, www.anztec.com email:sales@anztec.com

Contents

Warning	6
Configuration	6
Installation	
Overview	
Using the Menu System	
Start Up	
Reset Meters and Events to zero	
Load Tokens and Coins	
Daily Management	
Overview	
Entering The Attendant Menu	
Event Log	
Accountancy	
Terminal Credit Meter	
Cancelled Credit Meter	
Machine Reconciliation	
Site Config	
Site Name	
Site Address	
GST and ABN Number	
Receipt Message	
Tax Number Type, GST or ABN	
Purchase Value	
Set Date And Time	
Printing	
Hopper Count	22
Clear Short Term Meters	
Refills	
Status	
Credit Card Transaction Controller	
Overview	
Accessing	
Menu Access	
Menu Options	29
System Status	
View Event Log	30
Refund Purchase	31
Manual Purchase	32
Test Transaction	
Last Transaction Response	
Configure Network	
Configure E-Commerce	
Configure Email and Alerts	
Card Reader	38
Update System	39

Network Status Display	
Reset to Default IP Address	
Card Test Transaction	42
Network Status	42
Network Settings	42
Installing Printer Paper	
Loading paper – Auto Load	
Unloading paper	45
Mounting Guide	
Recommended Wall Cutout	47

While every effort has been made to ensure that the information contained in this literature is accurate, Anztec reserves the right to amend the size and specifications of this machine in line with its policy of continuing improvement and development

Security

As with any piece of cash handling equipment security is paramount to ensure the theft of money, tokens, credit card details etc does not occur.

Once a machine or component is delivered to a distributor or end user it is their responsibility to ensure that the machine or component is kept secure at all times.

Opening the secure cabinet to perform cash clearance, refills, and routine maintenance may expose the machine to security compromises. The distributor or end user must manage security issues using their own documented security procedures.

Anztec accepts no responsibility for security compromises caused by lapses or deficiencies in distributor or end user security procedures or controls.

While by no means a comprehensive list, the following are some suggested guidelines to help keep the machine secure:

Track and Log

- Location of the machine.
- Who opened a machine, for what reason, and when.
- Components removed from machine for repair or replacement.

Inspection

- Check exterior of the machine regularly for tampering.
- Check for installations that are unsecured or substandard. This includes associated equipment such as cables and network routers/modems.
- Look regularly for non standard items fitted to the exterior such as card skimming devices.
- Look regularly for non standard items fitted to the interior.

Monitor

- Have the machine within view of the attendant.
- Make sure the machine is in a well illuminated area.
- Use video surveillance to monitor the machine in unattended areas.

Personnel

- Ensure your employees are familiar with the operation of the machine.
- Check your employees are suitably qualified and authorized for any cash handling and maintenance work that is required.
- Limit and monitor access to cabinet keys to reduce the chance of theft or tampering.
- Monitor third parties who access the machine for any reason.

The fitting of machine components not directly supplied by Anztec may result in security being compromised. Anztec accepts no responsibility if this situation occurs.

Warning

Warning

Never remove, unplug, or replace any components inside this machine without first turning off the mains power. Failure to comply may result in damage to your machine and void your warranty.

Configuration

The QC-7600A is configured to customer or distributor specifications prior to leaving Anztec's production facility.

Configuration includes items such as the designation of hoppers as coin or token, the value of those coins or tokens, and additional bonus payout features. The Accountancy meters that are available are also dependant on configuration.

Details of the factory configuration of this machine are attached as a separate page to the back of this manual

If you require further information on the configuration of the equipment you have received please contact your supplier.

Installation

Overview

To prepare your **QC-7600A** for use, you need to:

- Connect the machine to a power source.
- Connect the machine to the internet and configure.
- Reset the system. (PIN number required)
- Load the tokens/coins and enter the refill amount in the Refills menu.

The following installation start up instructions tell you how to do this.

Using the Menu System

When in the attendant menu you are able to select the required options using two methods.

1. Where there is an arrow pointing to the top item of a menu pressing the # key will enter that menu. Use the A and B keys to scroll up and down through all menu options.



2. If you know the menu number or can see it on the display just press the appropriate number key on the alpha numeric keypad to access it directly. For the example above just press number 2 to enter the Accountancy menu.


When entering information into the unit the following keys have the functions below.

- The A key deletes a character.
- The **0** key inserts a space.
- Pressing the **B** key changes to uppercase followed by lowercase (Abc), all uppercase (ABC), or all lowercase (abc).
- The letter **Z** is after the letter Y but is not shown on the keypad.

Start Up

To start the machine:

- 1. Unpack and install the equipment supplied.
- 2. Open the Main Door of the machine.
- 3. Plug the **QC-7600A** power cord into the internal three pin socket. Plug the other end into a mains supply outlet. Use the P-clip supplied to strain relief the power cord.
- 4. Plug your network cable into the RJ45 network socket. **Note:** Credit card functionality will need to be setup using the Credit Card Transaction Controller instructions in this manual.

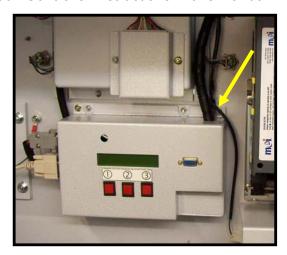

5. Remove the Transit Screw from the printer if fitted.



- 6. Switch the unit on using the Mains Switch on the Power Supply Front Panel
- 7. Fit printer paper if not pre-loaded. (See section in this manual)

Reset Meters and Events to zero

To reset the meters and events to zero:

- 1. Apply power to the QC-7600A
- 2. Open the front door.
- 3. To enter the Attendant Menu on the attendant LCD inside the machine press the # key.

ATTENDANT MENU

Press # to enter attendant mode



4. Using the A and B buttons scroll up and down through the Attendant Menu until you see the System Reset option, option 9, and then press button 9 to enter.



5. Enter your PIN number and press the # button to clear the meters and events. (Contact your supplier to obtain the PIN number)

The machine will automatically reset and return to the initial attendant menu.

6. Check and set the date time using the Set Date Time options in attendant menu 6. (see page 13)


The machine has now been reset to zero and is ready to accept currency.


To exit this menu and return to the Attendant Menu, press the * button.

Load Tokens and Coins

To refill a Token or Coin hopper:

- Insert your tokens or coins into the appropriate hopper while it is in situ, taking care to ensure you know the number of inserted tokens or coins.
- 2. Enter the Attendant Menu and using the A and B buttons scroll up and down through the Attendant Menu until you see the Refills option, and then press button 8.
- 3. The Refills Hopper menu will appear.

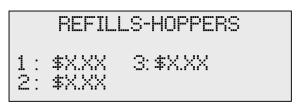

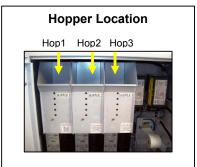

- 4. Press Button 1.
- 5. Enter the number of tokens or coins for the selected hopper and press #.

6. Press # to confirm or * to cancel.

```
Refill hopper
Hopper 1: $X.XX
Add xxx coins (X)
#=ok #=cancel
```

- 7. Repeat steps 5 to 7 to refill the other hopper denominations.
- 8. To exit this menu and return to the Attendant Menu, press the *button.
- 9. Close the front door of the QC-7600A. The Anztec QC-7600A should now be ready for use.

Daily Management

Overview

Once you have installed the **QC-7600A**, you can enter the Attendant Menu to perform the following functions when required:

- Access Event Log
- Access Accountancy Menu
- · Print Events and Meters
- Manage Refills
- Clear Short Term Meters

The following daily management instructions show you how to do this.

Entering The Attendant Menu

To enter the Attendant Menu on the **QC-7600A**, unlock and open the main door, and then press the # key.

ATTENDANT MENU

Press # to enter attendant mode

Once this is done the Attendant Menu will appear on the attendant LCD inside the machine.

ATTENDANT MENU A=Up B=Down ▶1 : Event Log 2 : Accountancy

Use the **A** and **B** buttons on the keypad scroll up and down through the Attendant Menu.

Press the number button on the keypad that corresponds to the Attendant Menu sub-menu you wish to enter.

A list of the sub menus is as follows:

- 1. Event Log
- 2. Accountancy
- 3. Site Config
- 4. Set Date Time
- 5. Printing
- 6. Hopper Count
- 7. Clear Short Term Meters
- 8. Refills
- 9. System Reset
- 0. Status

To exit the Attendant Menu close the main door.


Event Log

The **QC-7600A** has an Event Log which is accessible while in the Attendant Menu.

1. Press button 1 while in the Attendant Menu. The number in brackets shows the number of events in the system.



- 2. Press button A to scroll up or B to scroll down through the events.
- 3. Press the # button to display more detail of the event at the top of the event list.

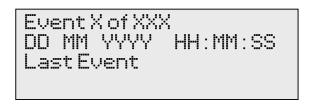

4. Press the * button to return to the main event list.

To exit this menu and return to the Attendant Menu, press the $^{\mbox{\ensuremath{\bigstar}}}$ button.

Accountancy

The **QC-7600A** has meters which are accessible while in the Attendant Menu.

1. Press button 2 to enter Accountancy Menu.

ACCOUNTANCY

1: Short Term Meters 2: Long Term Meters

2. Press button 1 to view Short Term Meters or 2 to view Long Term Meters.

SHORT TERM METERS

Credit Card Oty : 0 Value: \$0.00

LONG TERM METERS

Credit Card Oty : 0 Value: \$0.00

- 3. Press button A to scroll up or B to scroll down through the meters.
 - \$0.10 Coins In
 - \$0.20 Coins In
 - \$0.50 Coins In
 - \$1.00 Coins In
 - \$2.00 Coins In
 - Total Coins In
 - \$5.00 Notes In #1
 - \$10.00 Notes In #1
 - \$20.00 Notes In #1
 - Total Notes In #1
 - \$5.00 Notes In #2
 - \$10.00 Notes In #2
 - \$20.00 Notes In #2
 - Total Notes In #2
 - Total Notes In
 - Grand Total Out
 - Last Reset
 - Cancelled Credit
- 4. The meters available are:

- Button 1: \$X.XX
- Button 2: \$X.XX
- Button 3: \$X.XX
- Button 4: \$X.XX
- Credit Card Total
- Grand Total In
- \$X.XX Hop 1 Out
- \$X.XX Hop 1 Level
- \$X.XX Hop 1 Refill
- \$X.XX Hop 2 Out
- \$X.XX Hop 2 Level\$X.XX Hop 2 Refill
- \$X.XX Hop 3 Out
- \$X.XX Hop 3 Level
- \$X.XX Hop 3 Refill
- Total Coins Out
- Bonus Paid
- Terminal Credit

Terminal Credit Meter

Terminal Credit is the amount left to pay out if a hopper runs empty and the customer has not received their full pay out.

Completing a Hopper Refill on the empty hopper and then exciting the attendant menu into normal operation will cause the remaining amount to pay out.

The Terminal Credit value will then be reset to zero in the meters but the number of Terminal Credit events will still be shown.

Cancelled Credit Meter

Cancelled Credit is the amount left to pay if there is a power failure during a transaction.

By looking at this meter the amount still owing to the customer can be seen.

This meter can only be cleared by a Clear Short Term Meters in option 7 of the attendant menu.

This will also clear all other Short Term Meters.

Machine Reconciliation

From the accountancy meters the Grand Total In is able to be reconciled with the Grand Total Out using the following formula.


Grand Total Out - Bonus Paid + Cancelled Credit = Grand Total In

To exit this menu and return to the Attendant Menu, press the * button.

Site Config

The **QC-7600A** allows you to set the site configuration while in Attendant Menu.

1. Press button 3 while in the Attendant Menu.

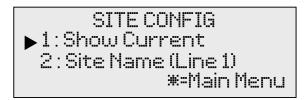

- 2. Press button 1 to show current site name and other site details.
- 3. Press buttons 2 to 9 to set more site details. The following are the corresponding details to numbers on the keypad. Alternatively use the A and B buttons to scroll up and down through the selections to view.
 - 2. Site Name (Line 1)
 - 3. Site Name (Line 2)
 - 4. Address (Line 1)
 - 5. Address (Line 2)
 - 6. GST or ABN Number (Type selected in option 8 of this menu)
 - 7. Receipt Message
 - 8. Tax Number Type, GST or ABN
 - 9. Purchase Value
- 4. Use the alpha numeric keypad to on the power supply to enter details into each category as required, see further instructions below.
 - The A key deletes a character.
 - The 0 key inserts a space.
 - Pressing the **B** key changes to uppercase followed by lowercase (Abc), all uppercase (ABC), or all lowercase (abc).
 - The letter **Z** is after the letter Y but is not shown on the keypad.

Site Name

To set the site name use the alpha numeric keypad.

Press the # key once completed.

Repeat for line two if required



Site Address

To set the site name use the alpha numeric keypad.

Press the # key once completed.


Repeat for line two if required



GST and ABN Number

To set the GST or ABN number, use the alpha numeric keypad.

Press the # key once completed.

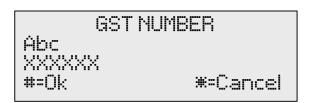

Receipt Message

To set the site name use the alpha numeric keypad.

Press the # key once completed.



Tax Number Type, GST or ABN

To set the tax number type, use the alpha numeric keypad.

Select 1 for GST, 2 for ABN. The current selection is shown.


Press the # key once completed.


Purchase Value


Note: Only enabled in some software versions.

To set the purchase value, use the alpha numeric keypad.

Restore defaults or select the front panel button you want to change the value of, Button 1, Button 2, Button 3 or Button 4.

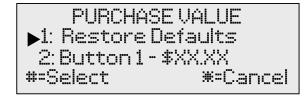

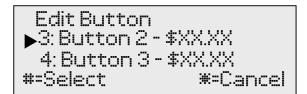


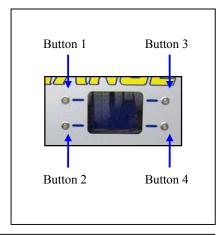

Enter the value you want to assign to that button.



Confirm that value by pressing the # key.

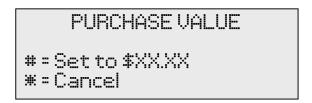

Change the value of any other buttons

Press the # key once completed.

Carry out a full system reset (see *System Reset*) to make ensure the accountancy will match the new purchase values.

To exit this menu and return to the Attendant Menu, press the * button.

Set Date And Time

The **QC-7600A** has a Date and Time feature which you can set while in the Attendant Menu.

1 Press button 4 while in the Attendant Menu.



- 2 Enter the Date and Time values using the keypad. Use the **C** button to move the left and the **D** button to move to the right to select individual values to adjust.
- 3 Press the # button to save or the * button to cancel the entry.

To exit this menu and return to the Attendant Menu, press the * button.

Printing

The **QC-7600A** has a Print function which is accessible while in the Attendant Menu.

From the Print Menu you can print copies of the Long Term and Short Term Meters, Events, and a test page.

1. Press button 5 while in the Attendant Menu to display the main Print Menu.

PRINTING 1: Accountancy 2: Events 3: Test Page

2. Press button 1, Accountancy, to print out Short Term meters, Long Term meters or both.

PRINT ACCOUNTANCY 1: Short Term 2: Long Term 3: Both

3. Or press button 2 on the main Print Menu to print All Events, New Events, or a Specified number of events. New Events are events that have occurred since the last event printout.

PRINT EVENTS 1: All Events 2: New Events 3: Specify Number

4. Or press button 3 on the main Print Menu to print a test page.

To exit this menu and return to the Attendant Menu, press the * button.

Hopper Count

The **QC-7600A** has a Hopper Count function which is accessible while in the Attendant Menu.

This allows the hoppers to run and count the remaining coins as they are ejected.

1. Press button 6 while in the Attendant Menu to enter the Hopper Count Menu.

```
Hopper Count
1: Hopper 1 - $X.XX
2: Hopper 2 - $X.XX
```

- 2. Select either, Hopper 1, Hopper 2, or Hopper 3.
- 3. The Hopper will begin to pay out tokens or coins.

```
Hopper Count
Hopper 1:0
$X.XX
In progress
```

- 4. Press * to stop the count and then # to cancel or * to resume.
- 5. The Hopper count will show Completed when hopper is empty. It is advisable to manually check the hopper is completely empty.

Note: Care must be taken when re-inserting hoppers after removal to avoid damage to the hopper connection pins in the machine

```
Hopper Count
Hopper 1:0
$X.XX
Completed
```

To exit this menu and return to the Attendant Menu, press the * button.

Clear Short Term Meters

The **QC-7600A** has Short Term Meters which you can clear while in the Attendant Menu.

1 Press button 7 to enter Clear Short Meters Menu.



2 Enter the PIN and press the # button clear the Short Term Meters.


To exit this menu and return to the Attendant Menu, press the * button.

Refills

To refill a Token or Coin hopper:

- 1. Insert your tokens or coins into the appropriate hopper while it is in situ, taking care to ensure you know the number of inserted tokens or coins.
- 2. Enter the Attendant Menu and using the A and B buttons scroll up and down through the Attendant Menu until you see the Refills option, and then press button 8.
- 3. The Refills Hopper menu will appear.



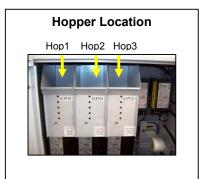

- 4. Press Button 1.
- 5. Enter the number of tokens or coins for the selected hopper and press #.

6. Press # to confirm or * to cancel.

- 7. Repeat steps 5 to 7 to refill the other hopper denominations.
- 8. To exit this menu and return to the Attendant Menu, press the button.

System Reset

The **QC-7600A** has a System Reset feature which you can set while in the Attendant Menu.

1 Press button 9 while in the Attendant Menu.



2 To clear all Short Term and Long Term Meters and all Events enter your PIN number and press the # key. (Contact your supplier to obtain the PIN number)

The machine will automatically reset and return to the initial attendant menu.


Site ID, Purchase Values, and Number of Power-ups are not reset.

To exit this menu and return to the Attendant Menu, press the * button.

Status

The **QC-7600A** has a Status menu which you can view while in the Attendant Menu.

1 Press button 0 while in the Attendant Menu.

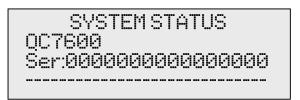

- 2 The initial screen shows the machine type and serial number.
- 3 Use the A and B buttons to scroll up and down through this menu to show the status of:
 - Hop 1 Ready
 - Hop 2 Ready
 - Hop 3 Ready
 - Val 1 Connected
 - Val 2 Connected
 - Coin Mech Connected
 - Printer Enabled
 - Card Connected

To exit this menu and return to the Attendant Menu, press the * button.

Credit Card Transaction Controller

Overview

The Anztec Credit Card Transaction Controller is a web based application designed to enable you configure your Anztec carwash credit card system, access transaction history, and manage transaction issues.


Accessing The Credit Card Transaction Controller

The Anztec Credit Card Transaction Controller configuration is accessed via your web browser.

For installations where your PC is on the same side of your router as the carwash system simply enter the default IP address below into your browser. The transaction controller uses port 85.

http://192.168.1.254:85

If you are entering off site through a router you will need to ensure translation between outside IP address access and the internal IP address is enabled.

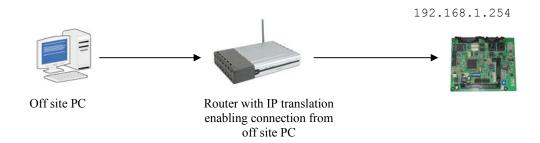

After successful connection through your browser the Anztec Credit Card Transaction Controller login screen will appear.



Menu Access

Access to the configuration features of the Anztec Credit Card Transaction Controller system are controlled by password protected login.

When you access the Credit Card Transaction Controller web application you will be prompted to enter a login password for the level you wish to enter.



The table below outlines the features accessible from each login level

Menu Item	Us	er	Attendant		Supervisor		Update	
	View	Edit	View	Edit	View	Edit	View	Edit
System Status	Yes	No	Yes	No	Yes	No	Yes	No
View Event Log	Yes	No	Yes	No	Yes	No	Yes	No
Refund Purchase			Yes	No	Yes	Yes	Yes	Yes
Configure Network			Yes	No	Yes	Yes	Yes	Yes
Configure E- Commerce			Yes	No	Yes	Yes	Yes	Yes
Configure Email Alerts			Yes	No	Yes	Yes	Yes	Yes
Miscellaneous Configuration			Yes	No	Yes	Yes	Yes	Yes
Set Clock			Yes	No	Yes	Yes	Yes	Yes
Update System							Yes	Yes


The Factory access level is used exclusively by Anztec.

Menu Options

System Status


Enter the System Status menu to view the following information:

- Last Transaction
- Transaction Status
- Network Status
- Net Registry Status
- · Entry system Status
- System Clock
- System Information

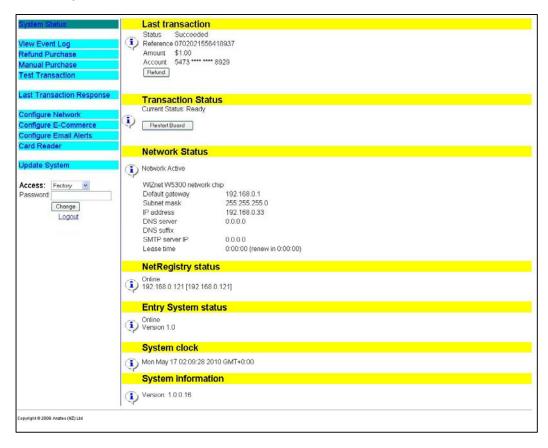

View Event Log


Enter the Event Log to find a list of all events from the most recent to the oldest.

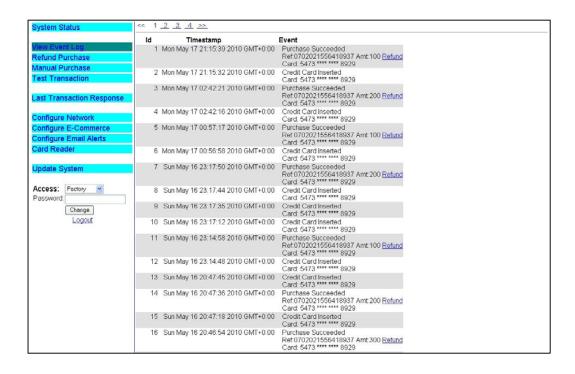

Refund Purchase


Enter the Refund Purchase menu to refund a purchase.

Enter the transaction reference number and value for the refund by looking through the Event log for the required information.

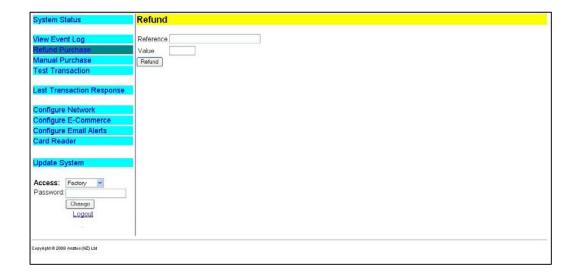


Manual Purchase

Enter the Manual Purchase menu and enter credit card details to complete a manual purchase.

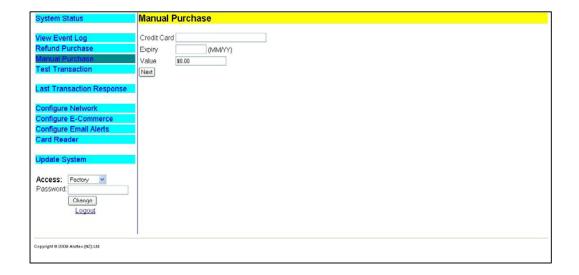


Test Transaction

To perform a test transaction click on the Perform Test Transaction button.

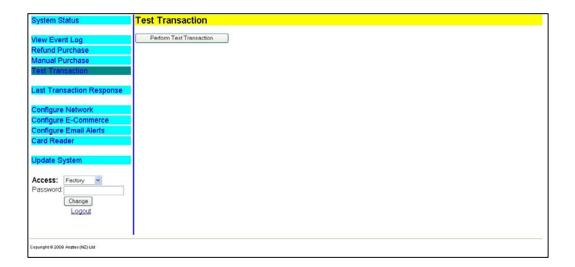

Last Transaction Response

Enter the Last Transaction Response menu to obtain details of the last transaction.

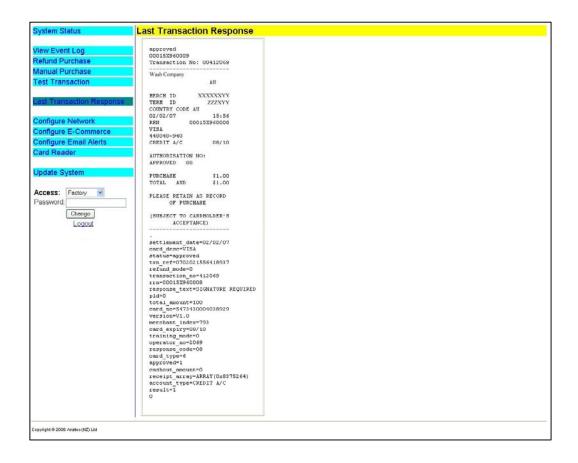

Configure Network

Enter the Configure Network menu and enter the following information:

- Network Interface settings
- · System update settings
- Email Alert settings.
- Web interface settings.

Default factory settings are:


IP address : 192.168.1.254 Subnet Mask : 255.255.255.0 Default Gateway: 192.168.1.1

Once the fields are complete click on the apply button.

Click the Restart Network button to enable the new settings to take effect.

To return to the previous settings click on the cancel button.

Note: When changing the IP address from its default setting to your own, you must ensure you have the address recorded, as this will be the address you need to use for your browser on the next login.

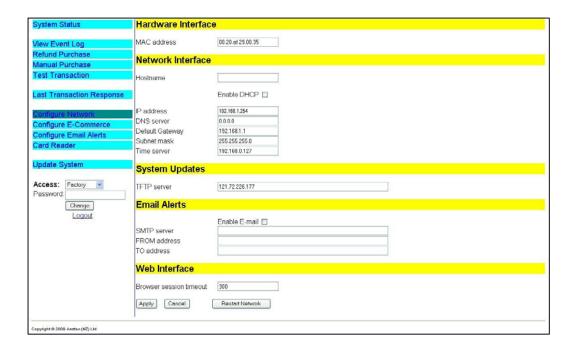

Configure E-Commerce

Configure the E-Commerce features by entering Connection and Security information.

Once the fields are complete click on the apply button.

To return to the previous settings click on the cancel button.




Configure Email and Alerts

Select Event Alerts that are to be emailed as they occur.

Choose to have the Event log emailed when it has reached a user defined percentage of its total capacity.

Once the fields are complete click on the apply button.


To return to the previous settings click on the cancel button.

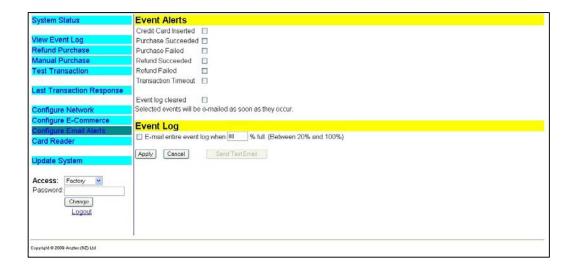

Card Reader

Select the port on the Anztec interface board the credit card reader is attached to.

Click on the update button so save the changes.

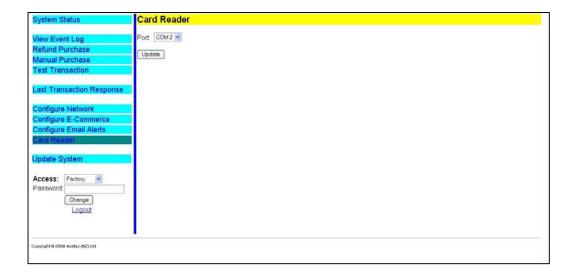


Update System


To update the system software, enter the update filename and click on the update system button.




The file update bar will appear and the system will begin to update

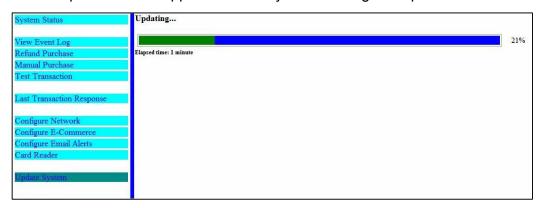


Once the update is completed you must go to the System Status page and restart the board in order for the changes to take effect.

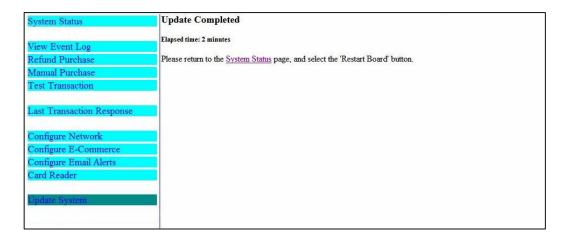

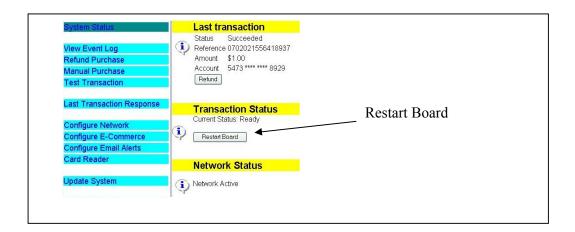

The board will now restart. To access the Credit Card Transaction Controller you will need to log in again.

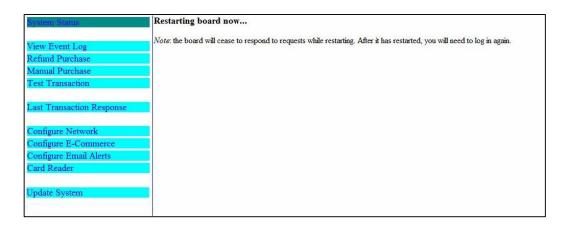


Network Status Display

The Network Status Display is used to display basic system settings and status, run a test transaction, and reset the system to its default IP address.

The Network Status Display is found inside your QC-7600A behind the hoppers. It consists of an LCD display and three selection buttons.

Under normal operation the information display will cycle Ecommerce Online, Terminal Online, and the current time and date.

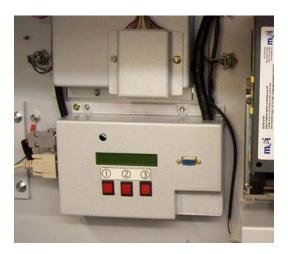

Reset to Default IP Address

At some point you may wish to reset the IP address of the machine to its original factory default, to do this follow the steps below.

- 1. Ensure the machine is powered off.
- 2. Hold down buttons 1 and 3 and turn the machine on.
- 3. Release buttons 1 and 3 and press button 2 at the prompt.

Card Test Transaction

Press Button 1 to run a test transaction, swipe your card at the prompt.

Card Swipe Test Swipe Card Now

Once the card is swiped the first and last four numbers on the card will be displayed if the swipe is successful.

Card Swipe Test
XXXXXXXXXXXXXXXX

Network Status

Press Button 2 to display network status, this forces a network status check. Ecommerce Online, Terminal Online, and the current time and date will be shown in an automatic sequence as per normal operation if the network is functioning correctly.

Checking Network
Please Wait.....

Network Settings

Press Button 3 to display network settings, these are shown in an automatic sequence.

IP Address
XXX.XXX.X.XX

Default Gateway
XXX.XXX.X.X

Subnet Mask
XXX.XXX.XXX.X

Installing Printer Paper

Loading paper – Auto Load

- 1. The Seiko printer has an auto loading system for the paper. To begin turn the machine power off.
- 2. Slide the printer frame back and place your new roll of paper on the roll holder.



3. Make sure the cutter unit and platen are in a closed state as shown below.



4. Insert the new paper into the paper slot in the back of the printer mechanism making sure it is square, see below.



5. Push the printer back into its normal operating position. This enables the paper to feed out through the receipt slot in the front panel.




- 6. Turn on the machine power the paper should automatically feed into the printer.
- 7. If the paper doesn't automatically feed into the printer, turn off the power and try re-inserting the paper.
- 8. Use the reverse and feed buttons on the printer to move the paper back and forward so it is flush with the front of the printer.

Unloading paper

- 1. With the machine on, slide the printer frame back and use the reverse button on the printer to eject the paper, alternatively follow the instructions below.
- 2. Turn the machine power off.
- 3. Slide the printer frame back.
- 4. Press the green release lever on the side of the printer down, the platen unit should open up as shown below.



- 5. Gently pull the paper back through the printer from behind.
- 6. Push the cutter and platen units back together by pushing on the green labelled areas as shown by arrows in the diagram below. When the platen unit is closing it may stop midway depending on the gear meshing. In such cases open the platen unit by using the green release lever and then close it again.

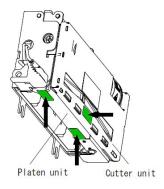


Note: The paper will have to be fully re-inserted if the cutter unit has been opened up, otherwise the paper will bunch up behind the cutter unit.

Mounting Guide

To install the unit:

- Remove the angle clamping brackets from the cabinet.
- Push unit through the aperture from the outside until the front panel is hard against the wall.
- Re-bolt the clamping brackets loosely to the cabinet.
- Push the clamping brackets up against the wall and tighten the bolts on the cabinet to lock it into place.
- The forward facing bolts on the clamping brackets can be adjusted for extra tension.
- Plug power cord into power supply, switch on and the unit is installed.

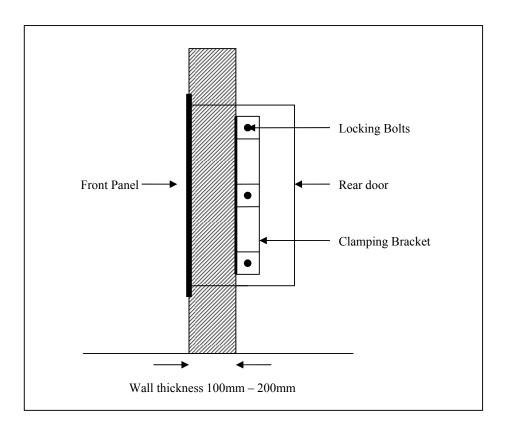

Recommended Wall Cutout

